


Podhlavník

Operadlo chrbta


Podrúčky



A
Imbus (malý)



B
M6x12 (2)



C
Krytka podhlavníka




D
M8x20 (3)



E
M8x13x2 (3)



F
M8x20x2 (3)



G
Imbus




H
M6x55 (4)



J
M6x16x2 (4)




krok 1

Vložte piest do križa.

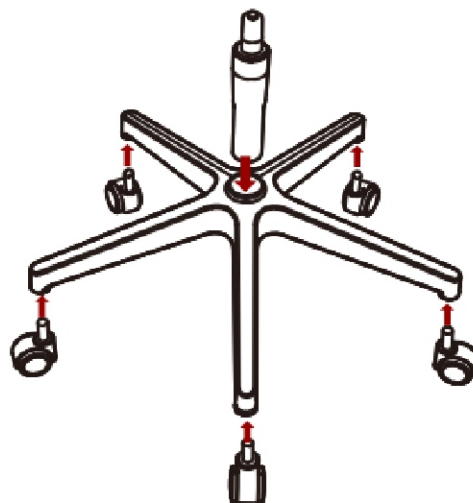



Nasadte kolieska na križ.

krok 2

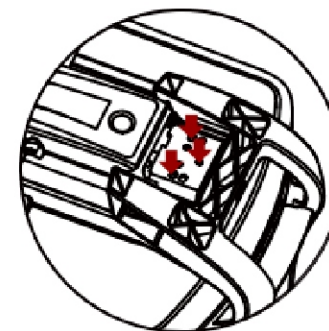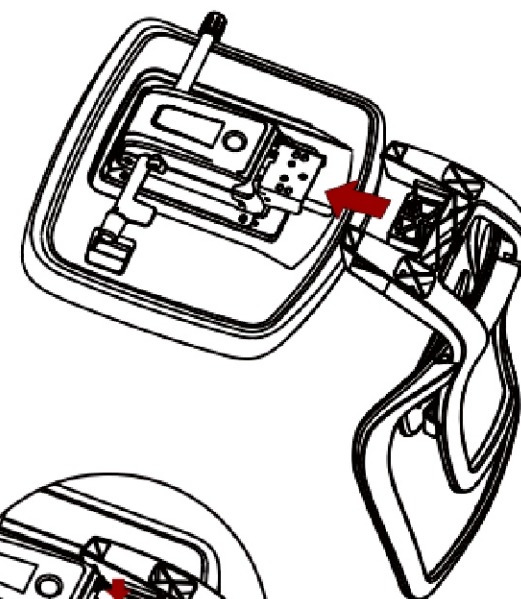**D****E****F****G**


Utiahnite skrutky (D - E - F) imbusom (G).

krok 3

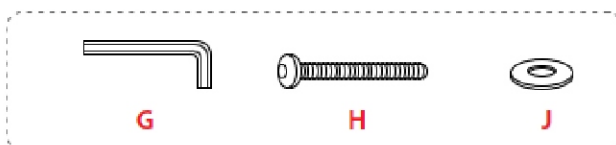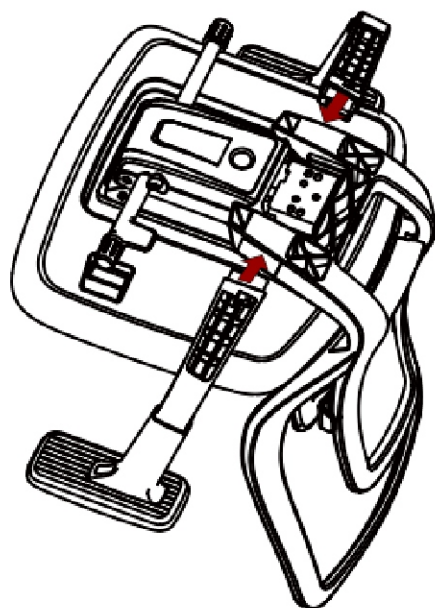


Uťahnite skrutky (H) použitím imbusu (G).



krok 4

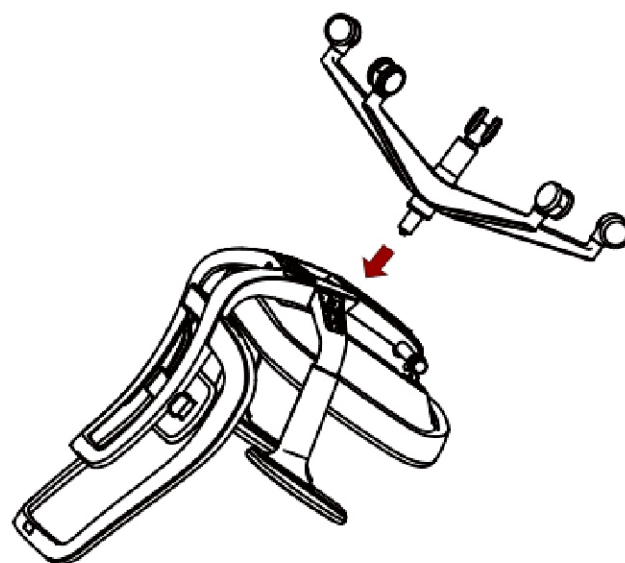

krok 5

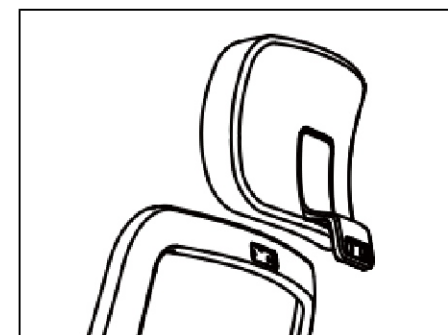

Pripevnite podhlavnik k operadlu skrutkami (B) použitím imbusu (A).

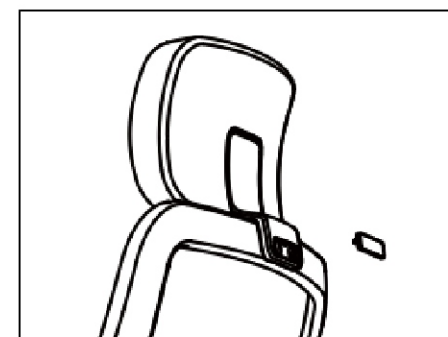

Zacvaknite krytku podhlavníka tak, aby malý otvor smeroval hore.

V prípade nevyužitia podhlavníka zacvaknite krytku tiež.